

# Ergonomics Keyboard

Manual/取扱説明書/使用说明书

Wired

User's Manual



YouTube



Ergonomics Keyboard  
FC OSKBERG

## 1. Opening

Thank you for purchasing the Bluetooth Keyboard.

## 2. Precautions

- This product is powered by electricity, if there is smoke or a strange smell, please turn off the power of this product and the connected computer or other equipment, and contact your dealer or our company.
- Do not allow liquids, metals, or other foreign objects inside the product.
- ▲ It may cause electric shock, fire or malfunction.
- Do not subject this product to strong vibration or impact.
- ▲ It may cause malfunction or damage.
- Loss of data and programs that may occur while using this product are not under warranty.
  - ▲ Please take measures to protect data such as backing up data on a periodic basis.
- When cleaning the product, do not use volatile organic solvents such as benzene or thinner.
  - ▲ To avoid damage to the surface or malfunction, wipe with a slightly damp cloth.

## 3. Warnings Regarding Health

Operating the mouse, trackball, and keyboard for long periods of time can lead to pain or numbness in hands, arms, neck, shoulders, etc. Serious damage may be incurred if such use is repeated. If you feel pain or numbness while operating the mouse, trackball and keyboard, stop use immediately and consult a doctor if necessary. Take regular breaks from daily computer work to avoid strain on hands, arms, neck, shoulders, etc.

## 1.はじめに

この度は、エルゴノミクスキーボードをお買い上げいただき、誠にありがとうございます。

## 2.注意

- 本製品は電気で作動しておりますので、発火する恐れがあります。万一煙が出たり変な臭いが出た場合は、本製品及び接続しているパソコンや機器の電源を切り、お買い上げの販売店又は弊社までご連絡ください。
- 本製品内部に液体、金属などの異物が入らないようにしてください。
- ▲感電や火災、故障の原因となります。
- 本製品に強い振動や衝撃を与えないでください。
- ▲故障・破損などの原因となります。
- 本製品を使用中に発生したデータやプログラムの消失についての保証はいたしかねます。
- ▲定期的にバックアップを取るなどの対策をあらかじめ行ってください。
- 本製品のお手入れをする場合には、ベンジンやシンナーなどの揮発性有機溶剤が含まれているものは使用しないでください。
  - ▲表面を傷めたり、故障の原因になることがあります。固くしぼった布などで水拭きしてください。

## 3.健康に関する注意

マウスやトラックボール、キーボードを長時間操作すると、手や腕や首、肩などに負担が掛かり痛みや痺れを感じることがあります。マウスやキーボードを操作中に身体に痛みや痺れを感じたら、直ちに操作を中止し、場合によっては医師に相談してください。また日常のパソコン操作では定期的に休憩を取り、手や腕や首、肩など身体に負担が掛からないように心がけてください。

## 1.致礼

尊敬的客户，感谢您选购我司商品，在此致以最诚挚的谢意。

## 2.使用须知

- 本商品使用电源运作，若出现冒烟或感觉到异味时，请立即切断本产品及已连接的电脑或其他设备的电源，并与所购买的门店或我司联系。
- 请避免液体、金属等异物进入产品内部。
  - ▲有可能造成触电、火灾、故障。
- 请勿剧烈摇晃或撞击本产品。
  - ▲有可能造成故障、破损。
- 本产品使用时产生的数据或程序丢失，恕我司概不负责。
- ▲请采取定期备份等措施以防丢失。
- 清洁本品时，请勿使用含有苯精或稀释剂等挥发性有机溶剂的清洁用品。
  - ▲有可能损坏表面、造成故障。请用拧干水分的抹布轻轻擦拭。

## 3.健康须知

长时间使用鼠标、轨迹球以及键盘会给手臂、头部和颈部等增加负担进而产生疼痛或麻木。长此以往可能给身体造成严重损伤。倘若您使用鼠标和键盘过程中感觉到疼痛或麻木，请立刻停止使用，并根据自身情况咨询医生。此外，请您注意日常使用电脑时要多休息多活动，不要给身体增加过多负担。

## 4. Specifications

Key switch	Rubber dome	Key stroke	2.2±0.2mm
Key display	English	Actuation force	55g
Key number	124 Keys		
Power supply	USB		
Power consumption	50mA or less		
Size・Weight	W460×D222×H38mm	approx.724g	
Cable length	1.8m		
Accessories	Instruction manual		

- ※ This product cannot implement special key functions of the Laptop keyboard or the manufacturer's keyboard (such as adjusting screen brightness or adjusting volume, etc.)
- ※ Commands before Windows starts (BIOS settings, SCSI board settings, etc.) may not be available.

## 5. Compatible Models

Windows PC with a USB port

## 6. Compatible Systems

Windows VISTA/XP/7/8/10

## 4.仕様

キースイッチ	メンブレン	キーストローク	2.2±0.2mm
キー表示	US	動作力	55g
キー数	124キー		
給電方式	USB		
消費電流	50mA以下		
サイズ・重量	W460×D222×H38mm	約724g	
ケーブル長さ	1.8m		
付属品	取扱説明書		

- ※ノートパソコンや各メーカー純正キーボードのファンクションキーにあらかじめ割り付けられている特殊機能(画面の明度調整やボリュームのアップダウンなどは、このキーボードからは操作できません。
- ※Windowsが起動する前のコマンド(BIOSの設定、SCSIボードの設定などは使用できない場合があります。

## 5.対応機種

USBポートを持つWindows搭載パソコン

## 6.対応OS

Windows VISTA/XP/7/8/10

## 4.规格参数

按键	火山口式	键程	2.2±0.2mm
键位表示	英语	输入力	55g
键数	124键		
供电方式	USB		
消耗电流	50mA以下		
尺寸・重量	W460×D222×H38mm	约724g	
线长	1.8m		
附属品	说明书		

- ※无法通过本产品实现笔记本电脑键盘或原装键盘的特殊自定义按键功能(例如调整屏幕亮度或调节音量等)
- ※在Windows启动之前,可能会出现命令(BIOS设置、SCSI板设置等)不可用的情况。

## 5.适用设备


带有USB接口的搭载Windows的电脑

## 6.对应OS

Windows VISTA/XP/7/8/10


## 7. Connection Method

This product supports hot plugging, so you can plug and unplug the USB cable even when the computer is powered on.

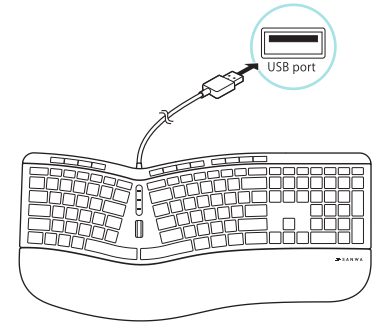


## 7.接続方法

本製品はホットプラグに対応していますので、パソコンに電源が入っていてもUSBケーブルの抜き差しができます。

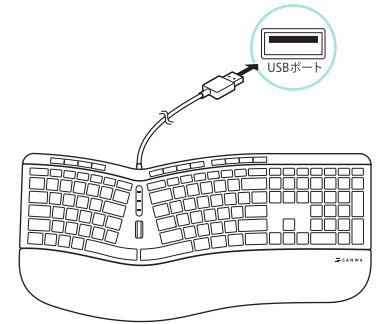

## 7.连接方法

本产品适用热插拔，在电脑电源接通的情况下也可以插拔USB线。

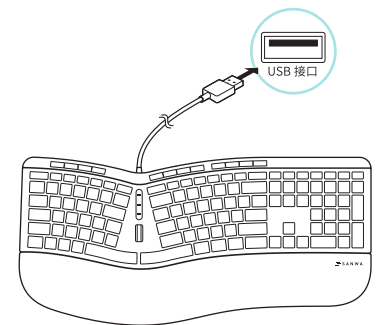

## NOTE:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## 8. Main Buttons and Functions

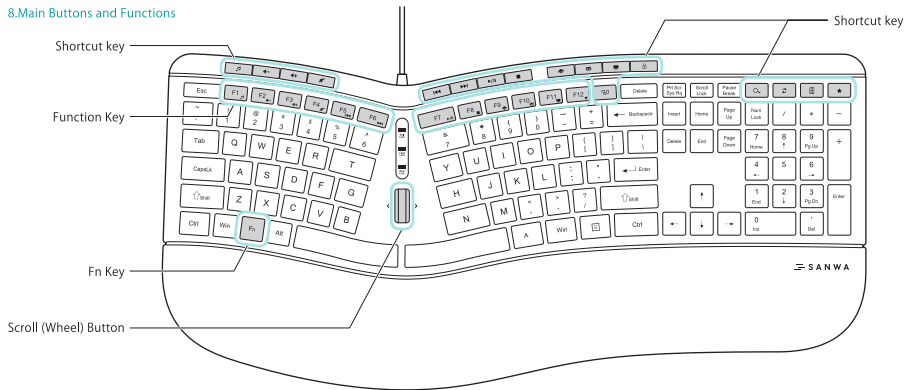

Press the function key or press the shortcut key at the top while holding down the Fn key to use the following functions.

F1	Media player	Start the media player.
F2	Volume down	Press to lower the volume.
F3	Volume up	Press to increase the volume.
F4	Mute	Stop the audio output. Press again to unmute.
F5	Previous song	Press when playing music to the previous song.
F6	Next song	Press when playing music to the next song.
F7	Pause/Play	Play music. Press during playback to pause.
F8	Stop	Stop.
F9	Browser	Open the web browser.
F10	Mail	Launch the E-mail software.
F11	Computer	Launch the Explorer.
F12	Lock	Lock the computer.

Switch window	Switch between windows.
Search	Open the search window.
Refresh	Refresh the web browser.
Calculator	Launch the calculator software.
F12 ★ Favorites	Open the Favorites section of IE.

※The function keys may not work or may work differently depending on the OS version and the environment in use.

## 9. Warranty Term


1 year

## 10. Inquiries

EN : support-en@sanwa.com



## 8. 主なボタンと機能

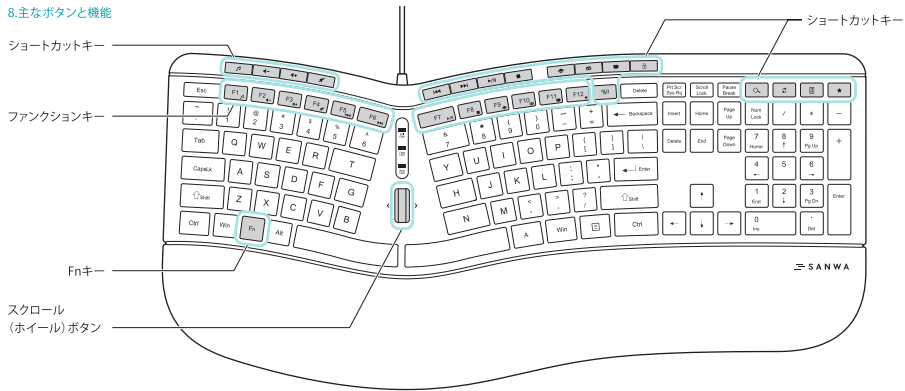

Fn キーを押しながらファンクションキーを押すか、上部のショートカットキーを押すと下記の機能を使用することができます。

F1	メディアプレイヤー	メディアプレイヤーを起動します。
F2	音量を下げる	押すと音量を下げます。
F3	音量を上げる	押すと音量を上げます。
F4	ミュート	音声出力を止めます。もう一度押すと、ミュートを解除します。
F5	曲戻し	音楽を再生中に押すと前の曲に移動します。
F6	曲送り	音楽などを再生中、次の曲に飛びます。
F7	再生/一時停止	音楽を再生します。再生中に押すと一時停止します。
F8	停止	停止します。
F9	ブラウザ	ウェブブラウザを起動します。
F10	メール	メールソフトを起動します。
F11	コンピューター	エクスプローラーを起動します。
F12	ロック	パソコンをロックします。

ウィンドウの切り替え	ウィンドウを切り替えます。
検索	検索ウィンドウを開きます。
更新	ウェブブラウザを更新します。
電卓	電卓ソフトを起動します。
F12 ★ お気に入り	IEのお気に入り欄を開きます。

※ファンクションキーの動作は、OSのバージョンやご使用の環境によって動作しない場合や動作が異なる場合があります。

## 9. 保証期間


1年

## 10. お問い合わせ

JP : mailsupport@sanwa.co.jp



## 8. 主要按键和功能

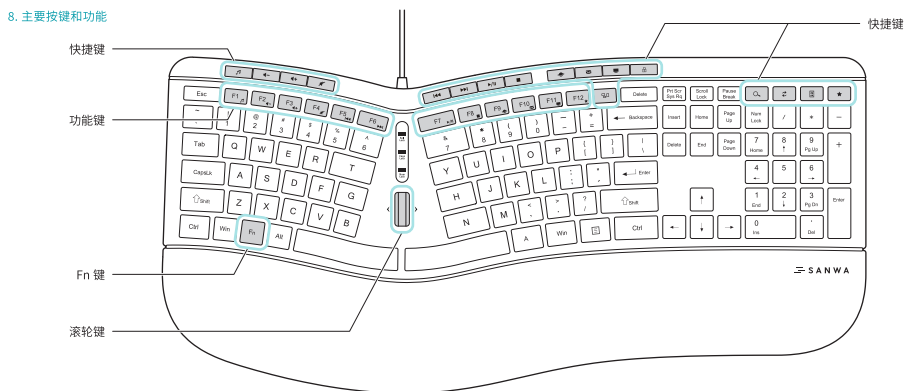

按住 Fn 键的同时按功能键或按顶部的快捷键可以使用以下功能。

F1	媒体播放器	启动媒体播放器。
F2	调低音量	按下减小音量。
F3	调高音量	按下增加音量。
F4	静音	停止音频输出。再按一次可取消静音。
F5	上一首	播放音乐时按下可返回上一首。
F6	下一首	播放音乐时按下可切换下一首。
F7	播放/暂停	播放音乐时按下即暂停。
F8	停止	按下即停止。
F9	浏览器	启动网络浏览器。
F10	邮件	启动电子邮件。
F11	电脑	启动资源管理器。
F12	锁定	锁定计算机。

切换窗口	切换窗口。
搜索	打开搜索界面。
刷新	刷新网络浏览器。
计算器	启动计算器。
F12 ★ 收藏	打开 IE 的收藏夹。

※根据 OS 版本和使用环境不同，功能键可能无法启用或对应功能不同。

## 9. 保修期限

1年

## 10. 产品咨询

CN : support-cn@sanwa.com

